



IP-170 PCIe RS-422/485 4-Port Card w/
isolation

Ordering Code: IP-170

Part No: IE-X07-M240-00-00012

DoorNet Tech P/N: 772130



RS-422/485 I/O series, a line of PCI Express Multi-port Serial Communication Board, is designed to meet PCI Express Base Specification 1.1.

It can be installed in virtually any available PC system and compatible with all major operating systems.

Users do not need to manually set jumpers to configure I/O addresses and IRQ locations.


This boards offer independent RS-422 and RS-485 ports for connecting kinds of serial terminals on the PC based systems.

This board is industrial stand which offer a reliable and high performance solution for serial multi-port communications.



DoorNet Tech

ST-LAB ISRAEL | 08-9791383 | WWW.ST-LAB.CO.IL

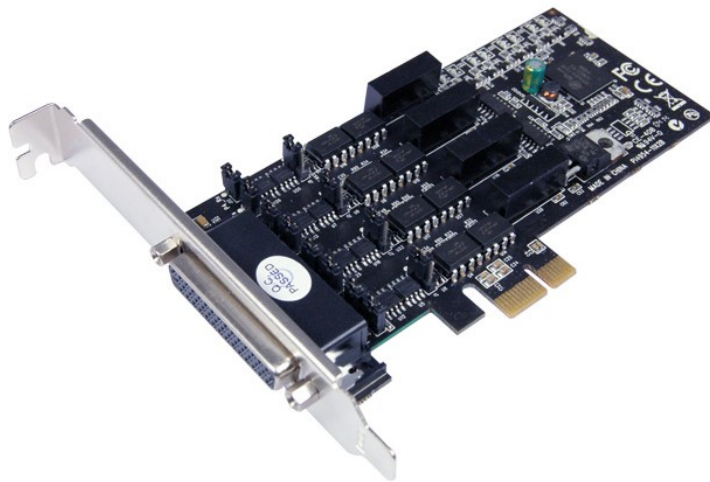

Features

Compliant with PCI Express Base Specification 1.1
Supports x1, x4, x8, x16 (lane) PCI Express Bus connector keys
Built-in 16C950 compatible UART
128-byte deep transmit/receive FIFOs
Serial communication speeds up to 1Mbps
RS-422 and RS-485 auto detect and switching
Low profile form factor
±15KV ESD protection on all signal pins
2KV isolation protection for all signal and power (Isolation version only)
Plug-n-Play, I/O address and IRQ assigned by BIOS

System Requirements

Windows® XP/Vista/7/8/10 (32/64 bit), Linux 2.6.x/3.x
One available PCI Express slot

Package Contents

1 x RS-422/485 PCIe Card
1 x Driver CD
1 x User Manual
1 x Fan Out Cable

Packing Information:

- * Brown Box Packing
- * 40pcs. Per carton
- * Measurement: 60x49x35 cm
- * G.Weight: 9 kg
- * N.Weight: 8 kg

